 




ALPHA PULSE

REMOTE MONITORING

RUN WITH THE PACK

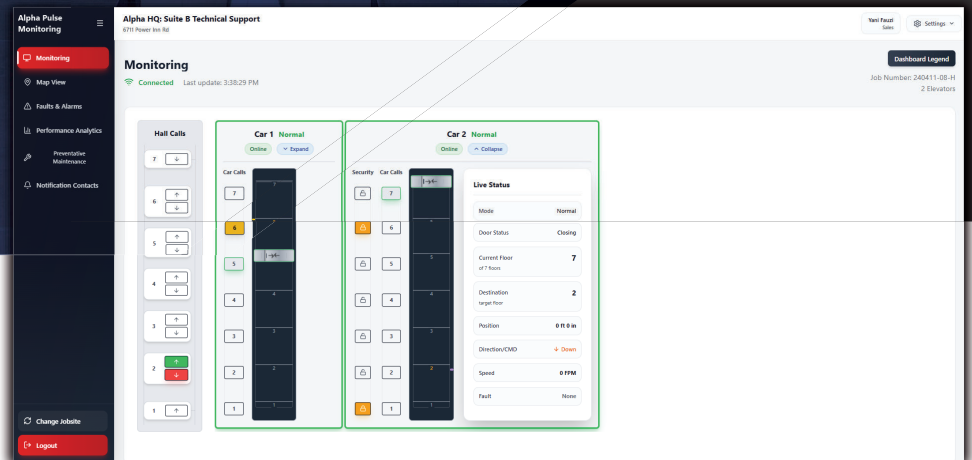


FEATURES:

- ☒ Live Data Display:
Mode of Operation, Current Floor,
Destination, Direction of Travel, Speed,
and Door Status
- ☒ View Active Car and Hall Calls
- ☒ Place Car and Hall Calls
- ☒ Review Faults and Alarm Logs
- ☒ Lock or Unlock Floors for both
Car and Hall Call Security

REQUIRED EQUIPMENT:


- ☒ Alpha Elevator Control Controller:
Lykos (Hydro) or Lobos (Traction)
- ☒ Pulse Box (provided by Alpha)
- ☒ Cat 5 Cable connected to building LAN

FAULTS, ALARMS,& JOB MANAGEMENT PAGES

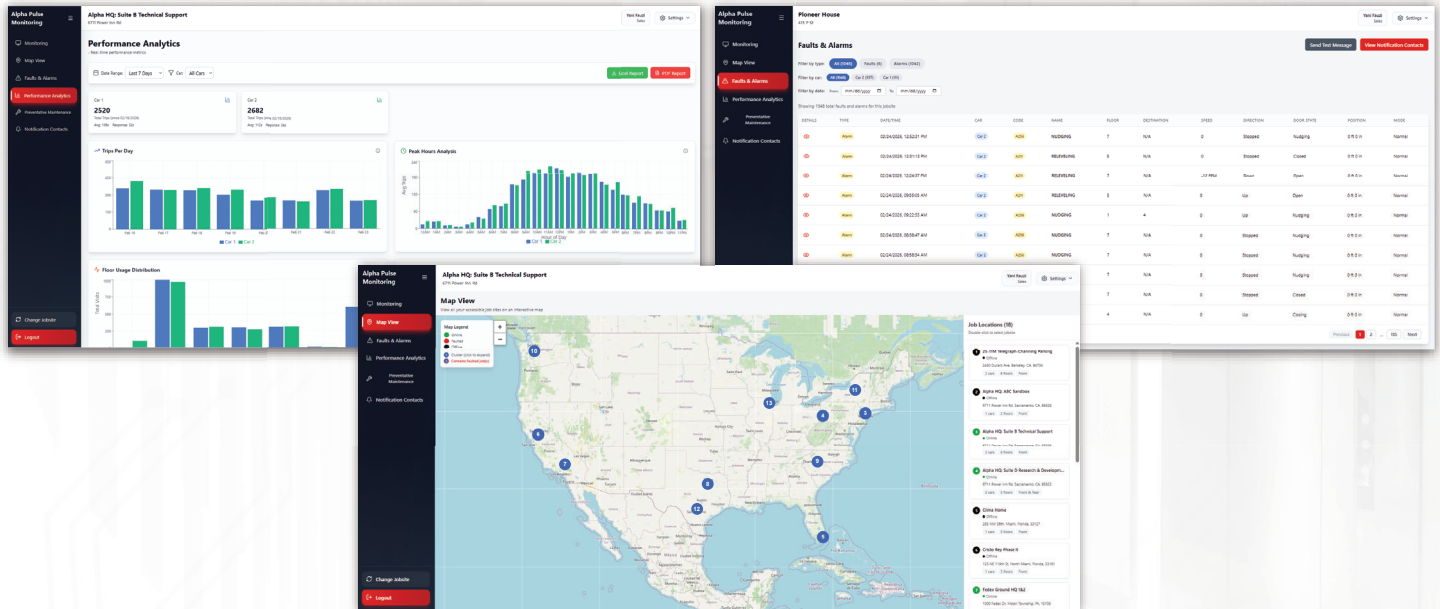


HOW IT WORKS:

- ✓ Connect the Pulse Box to building LAN via Ethernet
- ✓ Monitoring software will connect and send group data to the Alpha servers
- ✓ Open Alpha Pulse and select a jobsite listed to gain full access: www.alphapulsemonitoring.com

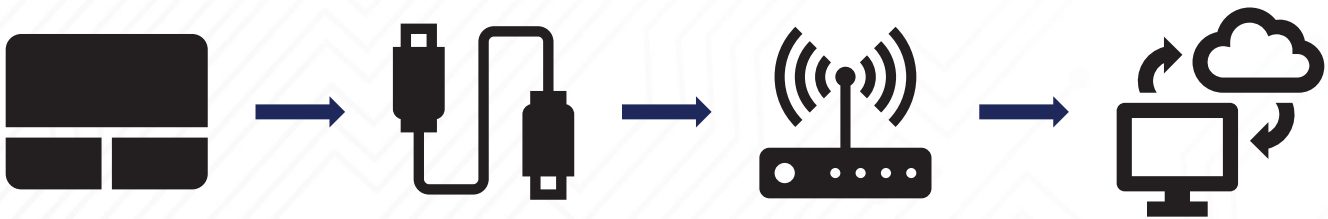

FIRST STEPS:

- 1.) Order Remote Monitoring for a jobsite to be set up on our Alpha servers
- 2.) An account will be created for you to access all your jobs with Alpha Pulse

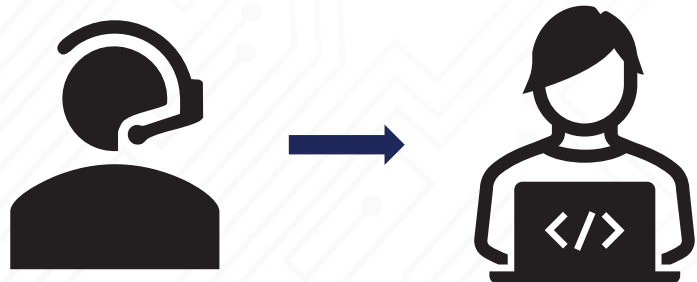

@ sales@alphaelevatorcontrol.com
 1-916-957-5900

www.alphaelevatorcontrol.com
 6711 Power Inn Rd, Suite B
 Sacramento CA. 95828